

# FITTING GUIDE

## Corner Post


### FI.PK.FIT.011 - CURVED/SQUARE CNR POST OR PILASTER ACCESSORIES



(J) x8 L Bracket Small




(B) x16 5/8" Screws



(H) x4 1 1/4" Screws



PROTECT AGAINST DAMAGE

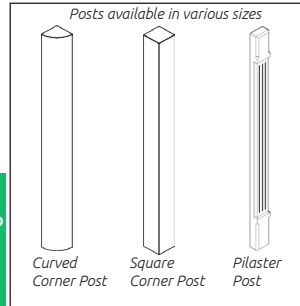

#### Step 1.

Scribe/cut the back of the decor end panel to the wall. If the height requires cutting/scribing ensure it is done on the top edge.



**Include the size of the post in your measurements so that it aligns with the frontals.**

**When cutting the decor end panel a table or circular saw is recommended.**

#### BEFORE YOU START

**INSTALLATION SHOULD BE PERFORMED BY A COMPETENT PERSON ONLY.**


**THIS PRODUCT COULD BE DANGEROUS IF INCORRECTLY INSTALLED.**

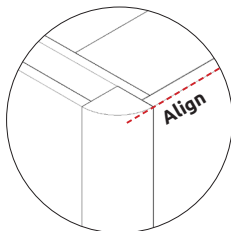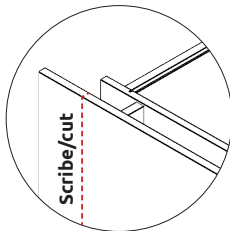

#### Step 2.

If required, cut the post from the top to the required height.

**See customer kitchen plan for reference.**

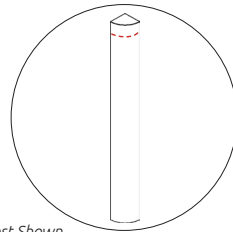


Sample Post Shown

#### Step 3.



Fit 4 x L brackets SML (J) on the front edge of the decor end panel and then attach to the post using the 5/8" screws (B) provided, 2 per bracket.

**Ensure decor end panel sits flush with post.**

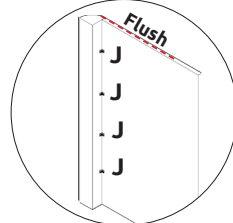

#### Step 4.

Fix filler panel to rear of decor end panel using 4 x L brackets SML (J) and the 5/8" screws (B) provided.

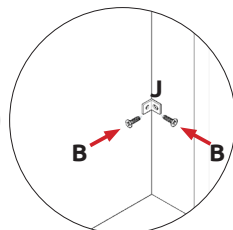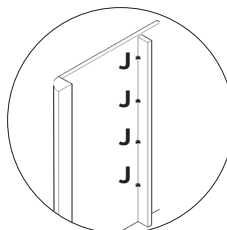

Base installation shown for illustration purposes.

#### Step 5.

Attach the assembled decor end panel to the carcass with 2 x 1 1/4" screws (H) from inside of the unit, through to the post. Then use 2 x 1 1/4" screws (H) from inside of the unit, through to the filler panel.

**The screws should be equally spaced and positioned so they are least visible.**

